

# High Frequency AC/DC Current Probe CP3008

## User Manual



The materials provided in this document are provided "as is" and are subject to change in future editions without notice. Further, to the maximum extent permitted by applicable law, Micsig disclaims all warranties, express or implied, in this manual and any information contained herein, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Micsig shall not be liable for errors or incidental or consequential damages arising out of the furnishing, use or application of this document or any information contained herein.

Should a separate written agreement between Micsig and the user contains warranty terms that conflict with those in this document, the warranty terms in the separate agreement shall prevail.

 Shenzhen Micsig Technology Co., Ltd.

Tel: +86-(0)755-88600880      Email: [sales@micsig.com](mailto:sales@micsig.com)      Website: [www.micsig.com](http://www.micsig.com)  
Add: 6F, Jinhuan Building, No. 56, Tiezai Rd, Bao'an District, Shenzhen, Guangdong, China.

# Warranty

The current probe body is guaranteed for 1 year. During the warranty period of the product, the company will be responsible for providing free maintenance for any faults caused by the quality of the product itself under normal use and has not been dismantled or repaired.

The warranty is invalid in the following cases, but maintenance services are provided, labor costs are waived, and only spare parts are charged:

- a. Accessories damage due to improper use, maintenance or storage.
- b. Damage caused by force majeure factors, such as natural disasters.

In the following cases, the company will refuse to provide maintenance services or provide maintenance services for a fee:

- a. Unable to provide product packaging or anti-counterfeiting labels on product packaging.
- b. The content of the anti-counterfeiting label has been altered, or is blurred and unrecognizable.
- c. It has been dismantled by unauthorized personnel by Micsig (eg: changing wires, dismantling internal components).
- d. There is no sales voucher or the content of the sales voucher does not match the product.

## Content

|                                                 |           |
|-------------------------------------------------|-----------|
| <b>General Safety Summary .....</b>             | <b>2</b>  |
| <b>Maintenance Safety .....</b>                 | <b>3</b>  |
| <b>Compliance Information .....</b>             | <b>4</b>  |
| Safety Compliance .....                         | 4         |
| Environmental Considerations .....              | 5         |
| Certification Complies with the Standards ..... | 5         |
| <b>Main Functions .....</b>                     | <b>6</b>  |
| <b>Probe Structure .....</b>                    | <b>7</b>  |
| Probe Head .....                                | 7         |
| Probe Control Module .....                      | 8         |
| <b>Connection .....</b>                         | <b>9</b>  |
| Connecting to an Oscilloscope .....             | 9         |
| Degaussing and Zero .....                       | 9         |
| <b>Function Check and Basic Operation .....</b> | <b>10</b> |
| <b>Technical Specifications .....</b>           | <b>11</b> |
| Warranted Characteristics .....                 | 11        |
| Typical Characteristics .....                   | 11        |
| Nominal Characteristics .....                   | 12        |
| <b>Precautions .....</b>                        | <b>13</b> |
| <b>Maintenance .....</b>                        | <b>15</b> |
| Troubleshooting .....                           | 15        |
| Cleaning .....                                  | 16        |

## General Safety Summary

Please read the following safety precautions carefully to avoid personal injury and prevent damage to this product or any product connected to this product.

To avoid possible danger, be sure to use this product as prescribed.

Only qualified personnel should perform repair procedures.

### Avoid fire or personal injury

#### **Connect and disconnect devices properly.**

- \* Do not plug or unplug probes or test leads while they are connected to a voltage source.
- \* Power off the circuit under test before connecting or disconnecting the current probe.
- \* Before connecting the probe to the circuit under test, please connect the probe output to the measuring instrument.
- \* Before connecting the probe input, please connect the probe reference lead to the circuit under test.
- \* Before disconnecting the probe from the measuring instrument, please disconnect the probe input end and the probe reference lead from the circuit under test.

**Observe all terminal ratings.** To avoid fire or electric shock, observe all product ratings and markings. Before making connections to the product, please consult the product user manual for details on ratings. Do not connect the current probe to any wire with a voltage exceeding its rating.

**Do not disassemble the machine.** Do not use the product for measurements with covers or panels open.

**Do not operate the product when it is suspected that the product is malfunctioning.**

**Keep away from exposed circuits.** Do not touch exposed wiring and components while the power is on.

**Do not operate in wet environments.**

**Do not operate in flammable and explosive environments.**

**Please keep the product surface clean and dry.**

### Terms in this manual



**WARNING:** A "WARNING" statement identifies conditions or actions that could result in personal injury or life-threatening conditions.

---



**CAUTION:** A "CAUTION" statement identifies conditions or actions that could cause damage to this product or other property.

---

## Maintenance Safety

Only qualified service personnel with relevant qualifications should perform service operations. Please read this "Maintenance Safety Summary" and "General Safety Summary" before performing any repair operations.

**Do Not Serve Alone:** Do not make internal repairs or adjustments to this product unless someone else is on site to provide first aid and resuscitation.

**Disconnect Power:** To avoid electrical shock, disconnect power to the instrument before disconnecting the main power cord.

**Pay attention when repairing with electricity:** Hazardous voltages or currents may be present in this product. Disconnect power and test leads before removing protective panels, soldering, or replacing components.

To avoid electric shock, do not touch exposed connectors.

## Compliance Information

This section lists the EMC (Electromagnetic Compatibility), safety and environmental standards to which the instrument complies.

### Safety Compliance

#### Equipment Type

Test and Measurement Equipment.

#### Pollution Degree

The micro-environmental pollution levels used to determine clearances or creepage distances can be classified into 4 levels.

- \* Pollution degree 1: no pollution or only dry non-conductive pollution.
- \* Pollution degree 2: In general, there is only non-conductive pollution, and occasional temporary conduction caused by condensation occurs. typical office/home environment. Temporary condensation occurs only when the product is not in use.
- \* Pollution degree 3: There is conductive pollution, or dry non-conductive pollution becomes conductive due to expected condensation.
- \* Pollution degree 4: Causes persistent conductive pollution, such as pollution caused by conductive dust or rain and snow.

#### Pollution Degree

Pollution Degree 2

#### Overvoltage Class Description

The overvoltage level is divided according to the IEC60664 standard, which is divided into four levels: CAT I, CAT II, CAT III, and CAT IV.

- \* CAT I is a low-voltage low-energy class with protective devices, generally referring to the internal voltage of electronic equipment.
- \* CAT II is a low-voltage high-energy level, branched from the main power supply circuit, and the 220V voltage of the home lighting circuit belongs to this category.
- \* CAT III refers to the high voltage and high energy level, refers to the fixed installation of the main power supply circuit, generally refers to 380V three-phase voltage.
- \* CAT IV refers to three-phase lines at utility power connections, any outdoor conductors.

#### Overvoltage Category

CAT II

## Environmental Considerations

This section provides information about the environmental impact of the product.

### Product End-of-Life Handling

Observe the following guidelines when recycling an instrument or component:

**Equipment Recycling:** Production of this equipment required the extraction and use of natural resources. The equipment may contain substances that could be harmful to the environment or human health if improperly handled at the product's end of life. In order to avoid release of such substances into the environment and to reduce the use of natural resources, we encourage you to recycle this product in an appropriate system that will ensure that most of the materials are reused or recycled appropriately.



This symbol indicates that this product complies with the relevant requirements of European Union Directives 2002/96/EC and 2006/66/EC on Waste Electronic and Electrical Equipment (WEEE) and Batteries.

## Certification Complies with the Standards

EC Conformity Declaration – Low Voltage: Low Voltage Directive 73/23/EEC, as amended by 93/68/EEC.

**EN 61010-1/A2:1995.**

Safety requirements of electrical equipment for measurement, control, and laboratory use.

**EN 61010-2-032:1995.**

Specific provisions for hand-held current clamps for electrical measurement and test equipment.

Other applicable regulations:

**IEC61010-1/A2:1995.**

Safety requirements of electrical equipment for measurement, control, and laboratory use.

**IEC61010-2-032:1994.**

Specific provisions for hand-held current clamps for electrical measurement and test equipment.

## Main Functions

Micsig CP3008 high-frequency AC/DC current probe has bandwidth up to 8MHz, 50A / 300A dual-range design, measures 300A continuous current and 500A peak current with 1% accuracy. With resolution up to 10mA, high signal-to-noise ratio, demagnetization and auto-zero completed at the same time, overload and jaw closure indicator lights for protection, CP3008 achieves fast and accurate signal capture, becoming the best choice for big current measurement. Standard BNC interface makes it compatible to work with all brands of oscilloscopes.

### Key Features

- ❖ DC~8MHz bandwidth
- ❖  $\leq 50\text{ns}$  rise time
- ❖ AC/DC measuring capability
- ❖ Switchable Range 50A / 300A
- ❖ 1% DC accuracy (typ.)
- ❖ Lowest measurable current 10mA
- ❖ One step to degaussing/auto-zeroing
- ❖ Overload and jaw closure indicator lights

### Applications

- ❖ NEV (New Energy Vehicle) design
- ❖ Switch-mode power supply development
- ❖ Semiconductor and avionics systems
- ❖ Inverter and transformer testing
- ❖ Electronic ballast design
- ❖ Industrial and consumer electronics
- ❖ Engine drive units
- ❖ Power electronics
- ❖ Drive system labs



# Probe Structure

## Probe Head


1. Close the jaw head and push the slider forward until the UNLOCK indicator turns off. Demagnetize the probe and take measurements.
2. Pull the slider back to the unlocked position to open the jaw head, allowing the wire to be inserted or removed.
3. The grip will accept wire diameters up to 20mm.
4. Place your finger within the safe handling area (the area inside the dashed line in the figure) when measuring.

 **WARNING:** Do not force wires larger than 20 mm into the grips, it may damage the probe.

 **WARNING:** To avoid electric shock, do not touch areas out of the safe handling area (the area within the dashed line in the diagram) when taking measurements.

 **WARNING:** Do not drop the probe or subject it to strong shocks, as this may result in damage to the probe.

 **WARNING:** Do not connect the current probe to any wire whose voltage or current exceeds the probe rating.

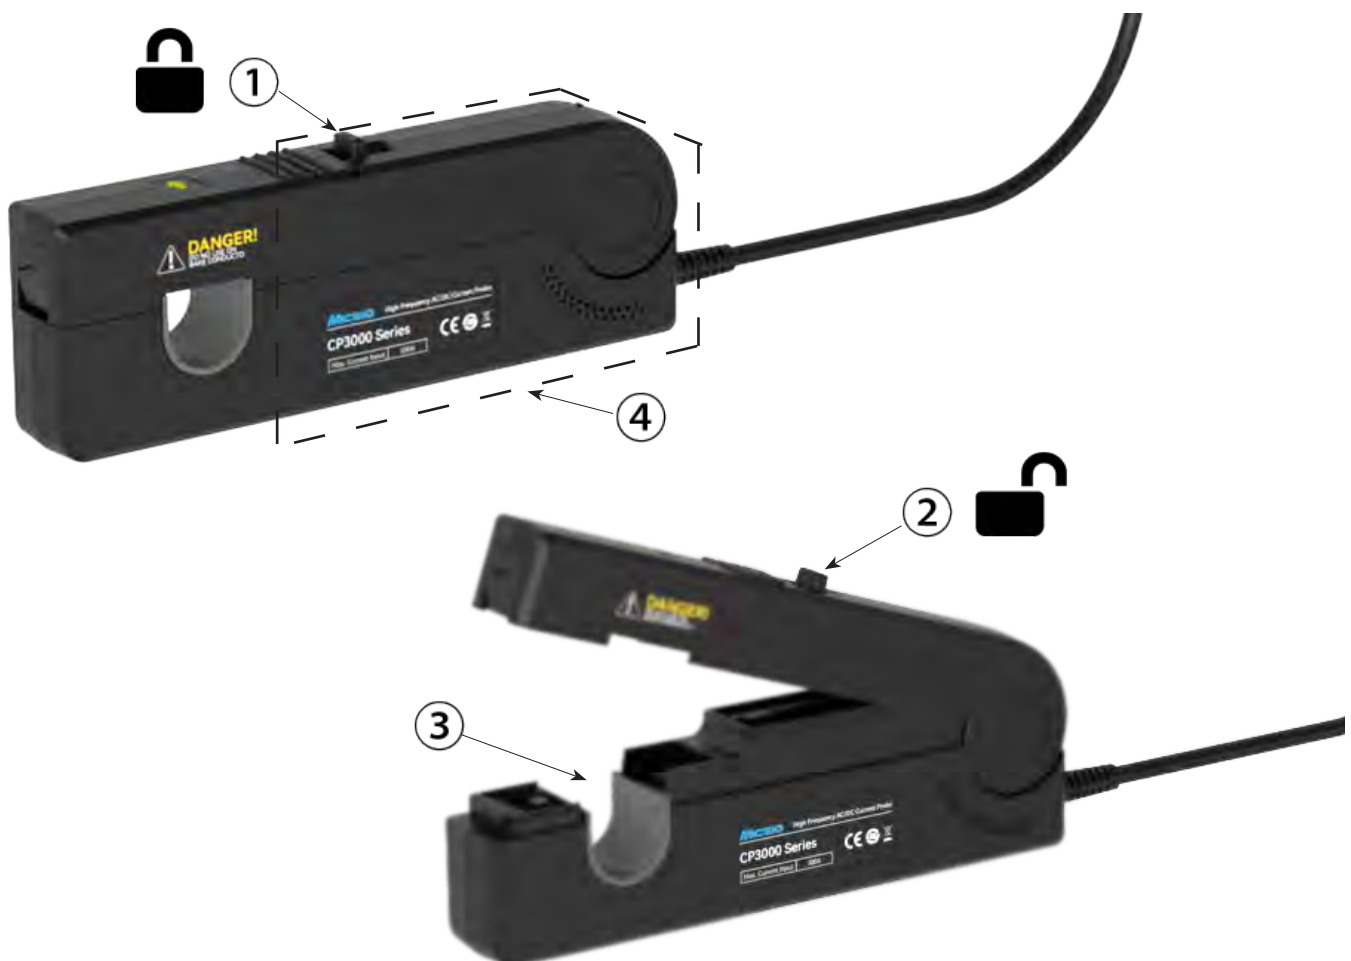

## Probe Control Module

The CP1008 function buttons and LED status indicators are located on the probe control module and are described as below:

### Function Button

- \* The Range button is the range switching button, which can be selected between 50A and 300A. Switch the range each time by lightly pressed.
- \* The "Zero" button is the automatic zero-calibration button, single press will automatically degauss and zero-calibration.

### Button Status Indicator

- \* The status indicator of the current range button will always be on to indicate the selected current range.
- \* Press the zero-calibration button "Zero". The range indicator will flash while the probe performs degaussing and zero calibration.
- \* When the current is overloaded, the OVERLOAD status indicator will light up.
- \* If the jaws are not securely closed, the UNLOCK indicator will remain on.

### Notes

- \* The probe will automatically go through a degaussing and zeroing procedure everytime it is powered on.
- \* Input current overload will magnetize the probe, please demagnetize the probe after the overload occurs.



## Connection

 **Caution:** The probe head is a precision part. Do not drop the probe or physically shock it, twist it, or drastically alter its surroundings. Do not insert wires larger than 20mm in diameter into the probe grip, as this may damage the probe.

## Connecting to an Oscilloscope

1. Connect the probe BNC cable to the channel interface of the oscilloscope.
2. Power the probe control module with the standard 12V power adapter provided with the probe.

 **CAUTION:** Must use the adapter provided with the probe for power supply, DO NOT use USB port on the oscilloscope.

## Degaussing and Zero

 **Note:** Before degaussing and zeroing the probe, be sure to verify that the probe head is locked. Close the jaw head and push the slider forward until the UNLOCK indicator turns off. Failure to fully close the jaws may lead to inaccurate measurement results.

To ensure accurate measurements, degauss the probe under following conditions:

- \* Turn on the measuring system and allow a 20-minute warm-up time
- \* Before connecting the probe to the wire
- \* Whenever there is a current or thermal overload
- \* Whenever the probe is placed in a strong external magnetic field

Press the zero-calibration button "Zero". The range indicator will flash while the probe performs degaussing and zero calibration.

## Function Check and Basic Operation



**CAUTION:** Do not force wires larger than 20mm in diameter into the probe jaws, as this may damage the probe. The mating surface of the probe head transformer is precisely polished and should be handled with care. Dirt on the mating surface of the probe head transformer may reduce measurement accuracy.

Use the following steps to check if the probe is working properly:

1. Connect the probe to any channel of the oscilloscope.
2. Set the oscilloscope impedance to 1MΩ.
3. If the auto-zero calibration fails, press the Zero button to perform zero calibration.
4. Fix the probe into the circuit.
5. Adjust the oscilloscope settings or use the oscilloscope's auto-setup function to display a stable waveform. After seeing a stable waveform, it means that the probe is working normally.

Here are some basic operations that should be noted:

- \* Before connecting the oscilloscope, please slide the probe slider to the LOCK position to lock the probe, otherwise it will affect the zero calibration accuracy.
- \* Before connecting the probe to the lead, please check the oscilloscope, if there is a DC offset, please degauss and zero the probe.
- \* Please do not touch the conductor under test and the sensor head of the probe during measurement.
- \* Close and lock the probe grip on the wire. For correct polarity readings, connect the probe from positive to negative so that the direction of current flow matches the arrow on the probe clip.

## Technical Specifications

The technical specifications in the tables in this section are valid under the following conditions:

- \* The probe has been calibrated at an ambient temperature of  $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ .
- \* The probe is connected to the host instrument using an input resistance of  $1\text{ M}\Omega$ .
- \* The probe must have a warm-up time of at least 20 minutes in an environment that does not exceed the stated limits.

Specifications for the HF AC / DC current probes are divided into three categories: Warranted Characteristics, Typical Characteristics, Nominal Characteristics

### Warranted Characteristics

**Table 1: Warranted Electrical Characteristics**

Warranted characteristics describe performance guaranteed to be achieved within tolerances or required by a particular test type.

| Characteristics                                    | Specifications                                                       |
|----------------------------------------------------|----------------------------------------------------------------------|
| Bandwidth                                          | DC-8MHz                                                              |
| Rise Time                                          | $\leq 50\text{ns}$                                                   |
| Accuracy (Max continuous current @ DC and 45-66Hz) | $\pm 1\% \pm 10\text{mA}$ (50A)<br>$\pm 1\% \pm 100\text{mA}$ (300A) |
| Lowest Measurable Current                          | 10mA (50A)<br>100mA (300A)                                           |

### Typical Characteristics

**Table 2: Typical Electrical Characteristics**

Typical Characteristics describe typical but not guaranteed performance.

| Characteristics         | Specifications                                           |
|-------------------------|----------------------------------------------------------|
| Measuring range         | 50Arms (50A)<br>300Arms (300A)                           |
| Max. measuring current  | 500Apk, 1000Apk-pk, 300Arms                              |
| Noise                   | $< 35\text{mApp}$ (50A)<br>$< 300\text{mApp}$ (300A)     |
| Overcurrent Alarm Value | $\geq 75\text{Apk}$ (50A)<br>$\geq 500\text{ApK}$ (300A) |
| Max. working voltage    | CAT II 600V    CAT III 300V                              |
| Max. floating voltage   | CAT II 600V    CAT III 300V                              |

**Table 3: Environmental Characteristics**

| Features              | Parameters                                                               |
|-----------------------|--------------------------------------------------------------------------|
| Operating temperature | 0~50°C                                                                   |
| Storage temperature   | -20°C ~80°C                                                              |
| Operating humidity    | 5%~95% (0~40°C , non-condensing)<br>5%~65% (40°C ~50°C , non-condensing) |
| Working height        | ≤ 3000m                                                                  |
| Storage height        | ≤ 12000m                                                                 |

**Table 4: Mechanical Characteristics**

| Features                        | Parameters     |
|---------------------------------|----------------|
| Probe head size                 | 17.7*6.4*2.7cm |
| Probe Control Module Dimensions | 9.6*4*1.7cm    |
| Maximum conductor diameter      | 20mm           |
| Cable Length                    | 2m             |
| Net weight                      | 460g           |

## Nominal Characteristics

**Table 5: Nominal Characteristics**

Nominal characteristics describe guaranteed characteristics, but these characteristics are not subject to tolerance limits.

| Features           | Parameter                                       |
|--------------------|-------------------------------------------------|
| Input coupling     | DC                                              |
| Output sensitivity | 1V / 10A (50A, 10X)<br>1V / 100A (300A, 100X)   |
| Power supply       | DC 12V                                          |
| Connection         | Connect the output to 1MΩ                       |
| Compatibility      | Compatible with any BNC interface oscilloscopes |

## Precautions

This section includes common problems need attention during the use of the probe.

- \* Please confirm that the oscilloscope's input impedance is set to  $1M\Omega$ , not  $50\Omega$ , otherwise it will not measure correctly.
- \* When measuring, be sure to push the jaw head slider to the LOCK position and hear a click to ensure that the probe jaw head is securely locked. If it is not fully closed, accurate measurement results will not be obtained.
- \* Do not exceed the maximum measurable current of the probe. In case of current overload, the probe indicator light will flash an alarm, please immediately disconnect the power supply. Current overload will magnetize the probe, please demagnetize the probe after overload.
- \* To ensure test accuracy, please warm up the probe for at least 20 minutes before use.
- \* Based on the amplitude and frequency of the measured current, the sensor head may produce resonance noise. Resonance noise may also occur during the demagnetization process, which is a normal phenomenon.
- \* Please use the cleaning method described in this manual to remove all foreign objects from the jaw head tooth surface before measuring. If there are foreign objects on the jaw head tooth surface, small gaps will be generated between the upper and lower layers of the current sensor, causing the probe to produce resonance noise.

- \* To ensure test accuracy, connect the measured conductor to the center of the jaw hole of the probe jaw head.
- \* When there is a strong magnetic field around the probe (such as near transformers and high current conductors) or a strong electromagnetic field (such as near radio transmitters), it may affect the measurement results.
- \* Make sure the measured current does not exceed the maximum measurable current of the probe. Exceeding the rated value, the core will be saturated, causing part of the waveform to be cut off during the saturation process. An excessive impact current may even cause the core unable to be demagnetized correctly, requiring re-zeroing.
- \* When the frequency is high, common mode noise may affect the measurement of the high voltage end of the circuit. In this case, please connect the probe to the low voltage end of the circuit, or reduce the frequency range of the signal source.
- \* When continuously inputting a current exceeding the maximum input range, the probe may start an internal protection function due to heat, and become unable to output normally. Please stop inputting the current, wait for it to cool down sufficiently, re-demagnetize and zero, and then enter the next normal measurement.
- \* When measuring small currents, please demagnetize and zero precisely. After zeroing, do not move the probe position arbitrarily. When measuring small currents, you can wrap the measured conductor in the jaw mouth of the probe for several turns, and the result divided by the corresponding number of turns is the actual current value.

## Maintenance

This section provides maintenance information for the probe.

## Troubleshooting

LED status lights on the probe can indicate the current probe status or errors. If the probe LED status light does not glow as expected, or if some function of the probe is not working properly, there may be an error. See the table below.

**Table 6: Probe Troubleshooting**

| Malfunctions                                          | Possible Cause                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Degaussing and auto-zero failed                       | The jaw is not locked;<br>The probe is clamped on the working circuit under test when the probe is degaussing and zero.                                                                                                                                                                                                                                                                                                             |
| Unable to measure DC signal                           | Check whether the probe is powered properly;<br>Check the oscilloscope coupling method.                                                                                                                                                                                                                                                                                                                                             |
| The amplitude of the measurement signal is too small. | Check whether the input impedance of the oscilloscope is 50Ω. Please adjust it to 1MΩ to work properly.                                                                                                                                                                                                                                                                                                                             |
| LED status light does not glow                        | The oscilloscope channel may be damaged, please try to replace other channels or other oscilloscopes. if the probe works normally on other channels or oscilloscopes, it is considered to be caused by the oscilloscope channel and has nothing to do with the probe; If the probe does not work on other channels or on the oscilloscope, the probe may be defective, please contact the Micsig after-sales department for repair. |

## Cleaning

Do not expose the probe to harsh weather conditions, the probe is not waterproof.



---

**CAUTION:** To prevent damage to the probe, do not expose it to sprays, liquids or solvents. When cleaning the outside of the probe, avoid wetting the inside, the probe is not waterproof.

---

Do not wipe the probe with chemical cleaners, they may damage the probe. Avoid chemicals containing gasoline, benzene, toluene, xylene, acetone, or similar solvents.

Clean the outside of the probe with a soft, dry, lint-free cloth or a soft bristle brush. If dirt remains, clean with a soft cloth or cotton swab dipped in 75% isopropyl alcohol solution and rinse with deionized water. Cotton swabs can be used to clean the tight spaces of the probe with any solution that can dampen the swab or soft cloth.

Do not use abrasives on any part of the probe.